

AEMC Single-Phase Power Quality Analyzer



- Displays Min, Max and Average Volts and Amps, Crest Factor, Peak value and K-Factor
- Calculates and displays Watts, VARs and VA, Power Factor and Displacement Power Factor for single-phase and balanced three-phase
- Displays total harmonic distortion (THD-F and THD-R) for voltage and current
- Displays individual harmonic values and % for Volts and Amps through the 50th harmonic
- Captures, displays and stores inrush current waveforms and statistics
- Stores up to eight screen captures
- Stores up to 1MB of trend recorded data
- Configurable from DataView® software or front panel
- Captures up to 4096 alarm events using up to 10 different thresholds
- Displays and records up to 17 different power quality parameters
- Includes DataView® software for data storage, real-time waveform display, analysis and report generation

All models include current probe with 10 ft lead and black connector, black & red 10 ft voltage leads and alligator clips, optical USB cable, NiMH battery, US 120V power cord, DataView® software, carrying bag, soft carrying pouch and user manual.

▲ 8230 PowerPad® Jr.

DataView® Software included with Model 8230

- Display and analyze real-time or recorded data on the PC
- Configure all PowerPad® Jr. functions & parameters
- Customize views, templates and reports
- Create and store a complete library of configurations
- Zoom in and out and pan through sections of the graph
- Display waveforms, trend graphs, harmonic spectrums, text summaries, transients, event logs & stored alarms

ORDERING INFORMATION

AE/2130.82	PowerPad® Jr. Model 8230 w/MN93-BK (240A)
AE/2130.83	PowerPad® Jr. Model 8230 w/SR193-BK (1200A)
AE/2130.84	PowerPad® Jr. Model 8230 w/24" AmpFlex® 193-24-BK (6500A)
AE/2130.85	PowerPad® Jr. Model 8230 w/36" AmpFlex® 193-36-BK (6500A)
AE/2130.86	PowerPad® Jr. Model 8230 w/MR193-BK (1000AAC/1400ADC)
AE/2130.87	PowerPad® Jr. Model 8230 w/MN193-BK (6A/120AAC)

SPECIFICATIONS

Electrical	
Voltage (TRMS)	660V Phase-to-Phase, 600V Phase-to-Neutral
Current (TRMS)	MN Clamp: 5mA to 120A or 2 to 240A MR Clamp: 10 to 1000AAC, 10 to 1400ADC SR Clamp: 3 to 1200A AmpFlex®: 10 to 6500A (Crest factor at 6500 = 1)
Frequency	40 to 70Hz
Other Measurements	kW, kVAR, PF, DPF, kWh, kVARh, kVAh, K-Factor, Flicker, Harmonic Phase Shift, Phase Rotation
Harmonics	THD-R, THD-F, V, A, VA 1st to 50th, Direction, Sequence
Sampling Frequency	256 samples/cycle
Data Storage	1.5MB partitioned for waveforms, alarms & trend
Power Source	NiMH AA rechargeable battery pack AC Supply: 120/230VAC (50/60Hz)
Battery Life	>Eight hrs with display on, >40 hrs with display off (recording mode)
Mechanical	
Communication Port	Optically isolated USB
Display	1/4 VGA (320 x 240) color LCD
Dimensions	8.3 x 4.3 x 2.4" (211 x 108 x 60mm)
Safety Rating	EN 61010, 600V Cat. III, Pollution Degree 2

AEMC Power Quality Meter



- Displays Min, Max and Average Volts and Amps, Crest Factor, Peak value and K-Factor
- Calculates and displays Watts, VARs and VA, Power Factor and Displacement Power Factor for single-phase and balanced three-phase
- Displays total harmonic distortion (THD-F and THD-R) for voltage and current
- Displays individual harmonic values and % for Volts and Amps through the 50th harmonic
- Captures and displays inrush current
- Calculates & displays phase rotation & RPM
- Displays °F or °C & resistance to 2000Ω
- Conducts continuity and diode tests
- Stores up to nine complete sets of readings for all volt, amp, power, harmonics and other measurements
- Configurable from DataView® software or front panel
- Operates off batteries or optional AC adapter
- Includes DataView® software for data storage, real-time waveform display, analysis and report generation

All models include current probe with 10 ft lead & black connector, black & red 10 ft voltage leads and alligator clips, optical USB cable, six 1.5V batteries, two safety test probes, DataView® software, carrying bag, soft carrying pouch and user manual.

▲ 8220

Three-line backlit digital display with custom icons

ORDERING INFORMATION

AE/2130.91	Power Quality Meter Model 8220 w/MN93-BK (240A)
AE/2130.92	Power Quality Meter Model 8220 w/SR193-BK (1200A)
AE/2130.93	Power Quality Meter Model 8220 w/24" AmpFlex® 193-24-BK (6500A)
AE/2130.94	Power Quality Meter Model 8220 w/36" AmpFlex® 193-36-BK (6500A)
AE/2130.95	Power Quality Meter Model 8220 w/MR193-BK (1000AAC/1400ADC)
AE/2130.96	Power Quality Meter Model 8220 w/MN193-BK (6A/120AAC)

SPECIFICATIONS

Electrical	
Voltage (TRMS)	660V Phase-to-Phase, 600V Phase-to-Neutral
Current (TRMS)	MN Clamp: 5mA to 120A or 2 to 240A MR Clamp: 10 to 1000AAC, 10 to 1400ADC SR Clamp: 3 to 1200A AmpFlex®: 10 to 6500A (Crest factor at 6500 = 1)
Frequency	40 to 70Hz
Other Measurements	kW, kVAR, PF, DPF, VA, Harmonics, Phase Rotation, Temperature, RPM, Resistance, Continuity, Diode Test
Sampling Frequency	256 samples/cycle
Data Storage	Stores nine sets of readings
Power Source	Six 1.5V AA Alkaline batteries (>8hr life with display on) AC Supply: 120/230VAC (50/60Hz) – optional
Communication Port	Optically isolated USB
Dimensions	8.3 x 4.3 x 2.4" (211 x 108 x 60mm)