

## Specifications

Power	12VDC nominal (10-30 VDC) Note: Degraded performance below 10V, permanent damage above 30V).
Power Consumption	<16.5mA open, <21mA closed
Setpoint Ranges	Trips at 0.75 ADC
Setpoint Adjust	No Adjustment
Response Time	On:600ms (max) Off: 500ms (max)
Isolation Voltage	3KV
Frequency Range	DC (Bidirectional)
Sensing Aperture	0.55" (14mm)
Case	UL 94V-0 Flammability Rated

### Output Rating & Environmental

<b>NODC</b>	Solid State Switch 1.0A @ 30VDC Maximum
Off State Leakage	<1uA
Environmental	-20 to 50° C (-4 to 122° F) 0-95% RH, Non Condensing

## Model Number Key

### DS1 - NODC - FF

-FF Front terminal housing, solid core

#### OUTPUT:

NODC Normally Open Solid State Switch, 1A @  
30 VDC Maximum

#### SENSOR TYPE:

DS1 DC current sensing switch closes at or above 0.75  
ADC, current in either direction



# INSTRUCTIONS



## DS1 SERIES DC Current Operated Switch

## Sensors and Transducers



#### Other NK Technologies Products Include:

AC & DC Current Transducers  
AC & DC Current Operated Switches  
1 $\phi$  & 3 $\phi$  Power Transducers  
Current & Potential Transformers (CTs&PTs)



## NK Technologies

3511 Charter Park Drive, San Jose, CA 95136  
800-959-4014 or +1-408-871-7510 Phone  
+1-408-871-7515 FAX  
sales@nktechnologies.com, www.nktechnologies.com

## Overload Capacity

MAX 5 SEC.	MAX CONTINUOUS
1000A	500A

## Quick "How To" Guide

1. Run the wire you are monitoring through aperture.
2. Mount the sensor.
3. Connect power & output wiring.
  - A. Make sure power supply matches specifications.
  - B. Make sure output load matches the output shown on the sensors' label.
4. Energize the monitored load. There will be a 7 second delay before output changes state upon first power on.

## Description

DS1 is a DC current operated switch. They operate (switch) when the current level through the hole exceeds a minimum level of 0.75 amps DC. They accept regulated supply voltage between 10 and 28 VDC. The output is not isolated from the power supply. The sensor is supplied with a normally open solid-state output (-NODC) closing on current presence.

## Installation

Run wire to be monitored through opening in the sensor. The direction of current does not matter.

DS1 switches work in the same environment as motors, contactors, heaters, pull-boxes, and other electrical enclosures. They can be mounted in any position or hung directly on wires with a wire tie. Just leave at least one inch distance between sensor and other magnetic devices.

Two circuits can be monitored with one sensor. If the total of both circuits exceeds 0.75 amps the output will be tripped. The direction of current flow must be the same in all conductors.

## Power Wiring

Connect the voltage (10-28VDC) to Terminals COM and 2. Tighten to 4.5 In-Lb torque.

The connection is polarity sensitive.

Terminals are nickel plated to reduce the chance of corrosion.

## Output Wiring



Connect control or monitoring wires to the sensor. Connect the controlled load between COM and terminal 1. Use up to 12-22 AWG copper wire and tighten terminals to 4.5 In-Lb torque. Be sure the output load does not exceed the switch rating of 1 amp, up to 30 VDC.

Incandescent lamps can have “Cold Filament Inrush” current of up to 10 times their rated amperage. Use caution when switching lamps.

**The solid state output is well suited to be used as an input to a PLC or other solid state controller.**

**Once powered, there is a factory set delay of about seven seconds before the output changes state.** Once energized, the output will open and close as quickly as possible, notifying the absence or presence of DC current.

## Installation

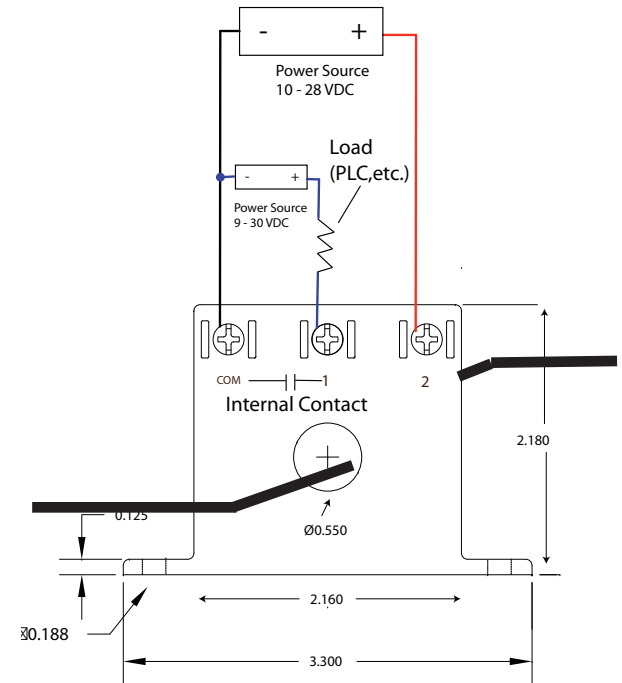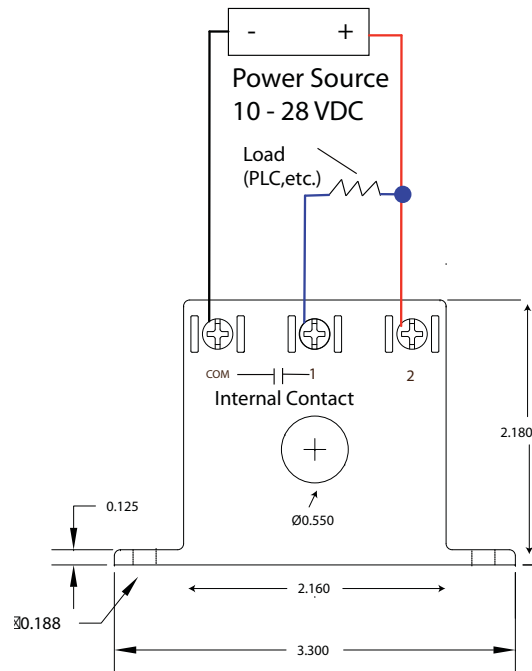

MONITORED AMPS	OUTPUT TYPE
None or below range	Normally Open
Below trip level	OPEN
Above trip level	CLOSED

## Trouble Shooting

### 1. Sensor is always tripped

- There may be some leakage current in the circuit being monitored. If this is the case, this sensor will not work, and a sensor with an adjustable trip point like the DS3 series should be considered.

### 2. Sensor will not trip

- Unit is not powered. *Check wiring.*
- The trip point may be too high. *Try looping the conductor through the sensing window a few times.*
- Switch has been overloaded and contacts are burned out. *Check the output load, remembering to include*

*inrush on inductive loads (coils, motors, ballasts).*

### 3. Contact is not closing or will not open

- The output can control a DC circuit only, up to one amp and between 10 and 30 volts. Check the controlled circuit voltage.